
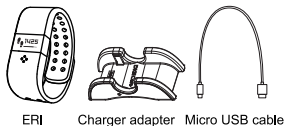
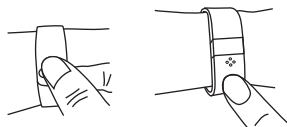
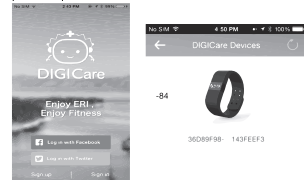

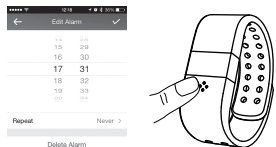
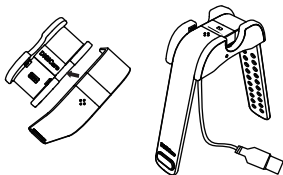
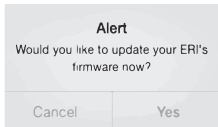





<div data-bbox="443 316 645 410"> ERI Fitness Activity Tracker Product Manual </div>  <div data-bbox="316 771 491 808"> DIGICare </div>	<div data-bbox="652 316 819 337"> What's included </div> <div data-bbox="675 373 959 498">  </div> <div data-bbox="652 544 890 568"> How to put your ERI on </div> <div data-bbox="665 597 952 722">  </div>	<div data-bbox="1001 316 1230 363"> Setting up ERI Using a Mobile Device </div> <div data-bbox="1001 380 1283 401"> Mobile device requirements </div> <div data-bbox="1001 410 1299 524"> <p>You can set up and sync your ERI using select mobile devices that support Bluetooth 4.0 technology. To see if your mobile device is compatible with your ERI, please visit http://www.digi-care.com/#!supported-devices-for-syncing/c2lw</p> </div> <div data-bbox="1001 540 1274 565"> Installing the DIGICare app </div> <div data-bbox="1001 571 1299 665"> <p>You can find the DIGICare app on the App store by searching for "DIGICare". If you already have the DIGICare app installed, check for available updates to make sure you have the latest version.</p> </div> <div data-bbox="1001 688 1076 711"> Pairing </div> <div data-bbox="1001 719 1285 795"> <p>Unlike most Bluetooth accessories, your ERI must be paired directly through the DIGICare app, not through the Settings app on your mobile device.</p> </div>	<div data-bbox="1324 316 1620 487"> <ol style="list-style-type: none"> 1. Open the DIGICare app. 2. Create an account; 3. Follow the onscreen prompts to power on your ERI. The app will begin searching for it. 4. Once the ERI is found, touch the ERI icon to connect. If there's a prompts ask you whether pair your device or not, please pair it. </div> <div data-bbox="1324 487 1627 665">  </div> <div data-bbox="1324 682 1418 706"> Syncing </div> <div data-bbox="1324 714 1632 790"> <p>Syncing occurs automatically every time you open the DIGICare app, as long as Bluetooth is enabled in the settings of your mobile device.</p> </div>	<div data-bbox="1657 316 1841 339"> Tracking with ERI </div> <div data-bbox="1657 347 1781 365"> <p>Your ERI tracks:</p> </div> <div data-bbox="1657 373 1947 485">  </div> <div data-bbox="1657 505 1965 583"> <p>Your ERI automatically tracks your steps taken, distance traveled, hour slept, quality of sleep, active minutes, and calories burned throughout the day.</p> </div> <div data-bbox="1657 626 1862 649"> Using Silent Alarms </div> <div data-bbox="1657 660 1960 738"> <p>Your ERI gently vibrates to wake or alert you with its silent alarm feature. You can set alarms using your a compatible mobile device.</p> </div>
<div data-bbox="339 847 615 992">  </div> <div data-bbox="321 997 567 1021"> Dismissing silent alarms </div> <div data-bbox="321 1029 626 1123"> <p>Your ERI will vibrate when your silent alarm goes off and the screen will flash. You can dismiss the alarm by touching the four dots located below the ERI screen. If you do not dismiss the alarm, it will repeat.</p> </div> <div data-bbox="321 1140 560 1164"> Tracking sleep with ERI </div> <div data-bbox="321 1170 631 1304"> <p>To put your ERI in tracking sleep mode, press and hold the button until a night icon appears, and long press the button again. When you complete tracking sleep, press and hold the button until a morning icon appears, press the button again confirms to turn off tracking sleep mode.</p> </div>	<div data-bbox="652 826 766 847"> Battery life </div> <div data-bbox="652 855 934 951"> <p>Your ERI contains a rechargeable lithium-polymer battery. With normal use, your fully charged ERI should last about 7 to 10 days before needing a charge.</p> </div> <div data-bbox="652 989 840 1015"> Charging your ERI </div> <div data-bbox="652 1021 941 1117"> <p>To charge your ERI, plug the ERI to the charger adapter, plug the charging cable into the Micro USB port of the charger adapter, plug the USB port on your computer.</p> </div> <div data-bbox="665 1140 948 1313">  </div>	<div data-bbox="989 826 1079 847"> Memory </div> <div data-bbox="989 855 1294 951"> <p>When you sync your ERI, your activity data is uploaded to your DIGICare's server. Your ERI holds detailed minute-by-minute information for the most recent 7 days, and up to 30 days of daily activity summaries.</p> </div> <div data-bbox="989 989 1108 1013"> Update ERI </div> <div data-bbox="989 1021 1285 1117"> <p>Update checking occurs automatically every time you open the DIGICare app. If there's a new ERI firmware, a prompt will popup, then click Yes, the ERI will update automatically.</p> </div> <div data-bbox="1035 1130 1253 1255">  </div>	<div data-bbox="1324 826 1593 873"> ERI General Information & Specifications </div> <div data-bbox="1324 889 1558 966"> <p>Weight: 22g / 0.776oz Size: 151-210mm / 5.94-8.28in Width: 20mm / 0.778in Thickness: 8.5mm / 0.335in</p> </div> <div data-bbox="1324 980 1593 1058"> <p>Operating Temperature:-20 to 45°C Store Temperature:-30 to 60°C Water Resistant: IPX 67 Maximum Operating Altitude: 9144m</p> </div> <div data-bbox="1324 1078 1499 1097"> <p>FCC ID: 2ACC4DC168</p> </div> <div data-bbox="1324 1131 1542 1209"> <p>Product description: ERI Model : DC-WT-01 Voltage: DC 3.7V DIGICare Technology Limited</p> </div> <div data-bbox="1324 1216 1634 1261"> <p>CE1588 (Made in China)</p> </div>	<div data-bbox="1657 826 1937 847"> Return policy and warranty </div> <div data-bbox="1657 859 1956 917"> <p>Please visit the DIGICare's website at http://www.digi-care.com/#!return-policy-and-warranty/co8</p> </div> <div data-bbox="1774 1268 1960 1305"> DIGICare </div>

<p>Safety Statement</p> <p>Important Safety Instructions</p> <ul style="list-style-type: none">•Read these instructions.•Keep these instructions.•Heed all warnings•Follow all instructions•Do not attempt to open the tracker. Substances contained in this product and/or its battery may damage the environment and/or human health if handled and disposed of improperly.•Do not tamper with your ERI.•Do not use abrasive cleaners to clean your ERI.•Do not place your ERI in a Dishwasher, Washing Machine or Dryer.•Do not expose your ERI to extremely high or low temperatures.•Do not use your ERI in a sauna or steam room.•Do not leave your ERI in direct sunlight for an extended period of time.•Do not leave your ERI near open flames.•Do not dispose of your ERI in a fire. The battery could explode.	<ul style="list-style-type: none">•Do not attempt to disassemble your ERI; it does not contain serviceable components.•Never allow children or pets to play with the ERI; the small components may be a choking hazard! <p>Built-in Battery Precautions</p> <p>Built-in Battery Precautions</p> <ul style="list-style-type: none">• Do not attempt to replace your ERI's battery. It is built-in and not changeable.• Charge your ERI using a certified computer, powered hub or power supply.• Charge the battery in accordance with the instructions supplied with this guide.• Use only the charger adapter that shipped with your product to charge the battery. <p>Disposal and Recycling Information</p> <p>The symbol on the product or its packaging signifies that this product has to be disposed separately from ordinary household wastes at its end of life. Please kindly be aware that this is your responsibility</p>	<p>to dispose electronic equipment at recycling centers so as to help conserve natural resources. Each country in the European Union should have its collection centers for electrical and electronic equipment recycling. For information about your recycling drop off point, please contact your local electrical and electronic equipment waste management authority or the retailer where you bought the product.</p> <p>Le symbole sur le produit ou sur son emballage signifie que ce produit à la fin de sa vie doit être recyclé séparément des déchets ménagers ordinaires. Notez que ceci est votre responsabilité d'éliminer les équipements électroniques à des centres de recyclage afin d'aider à préserver les ressources naturelles. Chaque pays de l'Union européenne a ses centres de collecte et de recyclage pour le recyclage des équipements électriques et électroniques. Pour plus d'informations ou trouver un centre de recyclage, contactez votre commune ou le magasin où vous avez acheté le produit.</p>	<ul style="list-style-type: none">•Do not dispose of the ERI with household waste.•Batteries are not to be disposed of in municipal waste stream and require separate collection.•Disposal of the packaging and your ERI should be done in accordance with local regulations. <div>  </div> <p>Li-ion</p> <p>DIGICare</p>
---	---	---	--

